

Model: LPK#44 Natural Gas to LP Gas Conversion Kit

THIS CONVERSION KIT MUST BE CONVERTED BY A QUALIFIED GAS FITTER/ SERVICE COMPANY. IF YOU DO NOT UNDERSTAND HOW TO COMPLETE THIS PROCESS THEN DO NOT CONVERT THIS APPLIANCE!

This LP Kit contains the following: 1 - OAS-LP44 (Brass orifice with a #44 hole), 1 - Decal label (placed next to rating plate), 1 - Installation instruction

- 1. Turn the fire pit and main gas supply OFF.
- 2. Ensure the fire pit is cool before converting.
- 3. Remove all media from the burner pan.
- 4. Remove the burner pan from the enclosure
- 5. Disconnect the 1/2" flex connector from the OAS.
- 6. Remove the 1/2" NPT Female to Male flared fitting from the old OAS (see figure 1).
- 7. Remove the old OAS. NOTE: Brass nut and large washer will remain attached.
- 8. Apply Teflon tape or pipe compound resistant to all gasses to burner threads.
- 9. Install the new OAS-LP.
- 10. Apply Teflon tape or pipe compound resistant to all gasses to the OAS-LP threads.
- 11. Install the 1/2" NPT Female to Male flared to the new OAS-LP (See figure 2).
- 12. Ensure a LP regulator is installed at the main gas supply before operating.
- 13. Fill out the label "This fire pit has been converted to LP gas" and adhere the blank area on rating plate.
- 14. Check all gas connections for leaks before and during operation with soapy water.
- 15. Conversion is now complete.

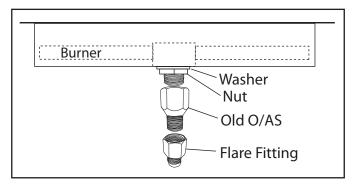


Fig. 1 Removing old OAS

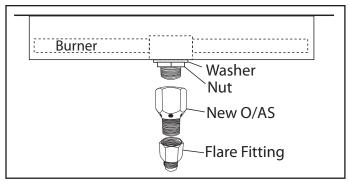


Fig. 2 Installing new OAS

For Technical Service Call: (855) 498-8324

Firegear Outdoors 9230 Conservation Way Fort Wayne, IN 46809 For Sales: (888) 672-8929

Web Site: www.firegearoutdoors.com